




```
R1#conf t
Enter configuration commands, one per line.  End with CNTL/Z.
R1(config)#ip dhcp pool SALES
R1(dhcp-config)#network 1.0.0.0 255.0.0.0
R1(dhcp-config)#default-router 1.0.0.1
R1(dhcp-config)#ex
R1(config)#
R1(config)#ip dhcp pool PRODUCTION
R1(dhcp-config)#network 212.25.0.0 255.255.255.0
R1(dhcp-config)#default-router 212.25.0.1
R1(dhcp-config)#ex
R1(config)#
R1(config)#ip dhcp pool MANAGEMENT
R1(dhcp-config)#network 129.23.0.0 255.255.0.0
R1(dhcp-config)#default-router 129.23.0.1
R1(dhcp-config)#ex
R1(config)#
R1(config)#ip dhcp pool HR
R1(dhcp-config)#network 29.0.0.0 255.0.0.0
R1(dhcp-config)#default-router 29.0.0.1
R1(dhcp-config)#ex
R1(config)#
```

DHCP CONFIGURATION

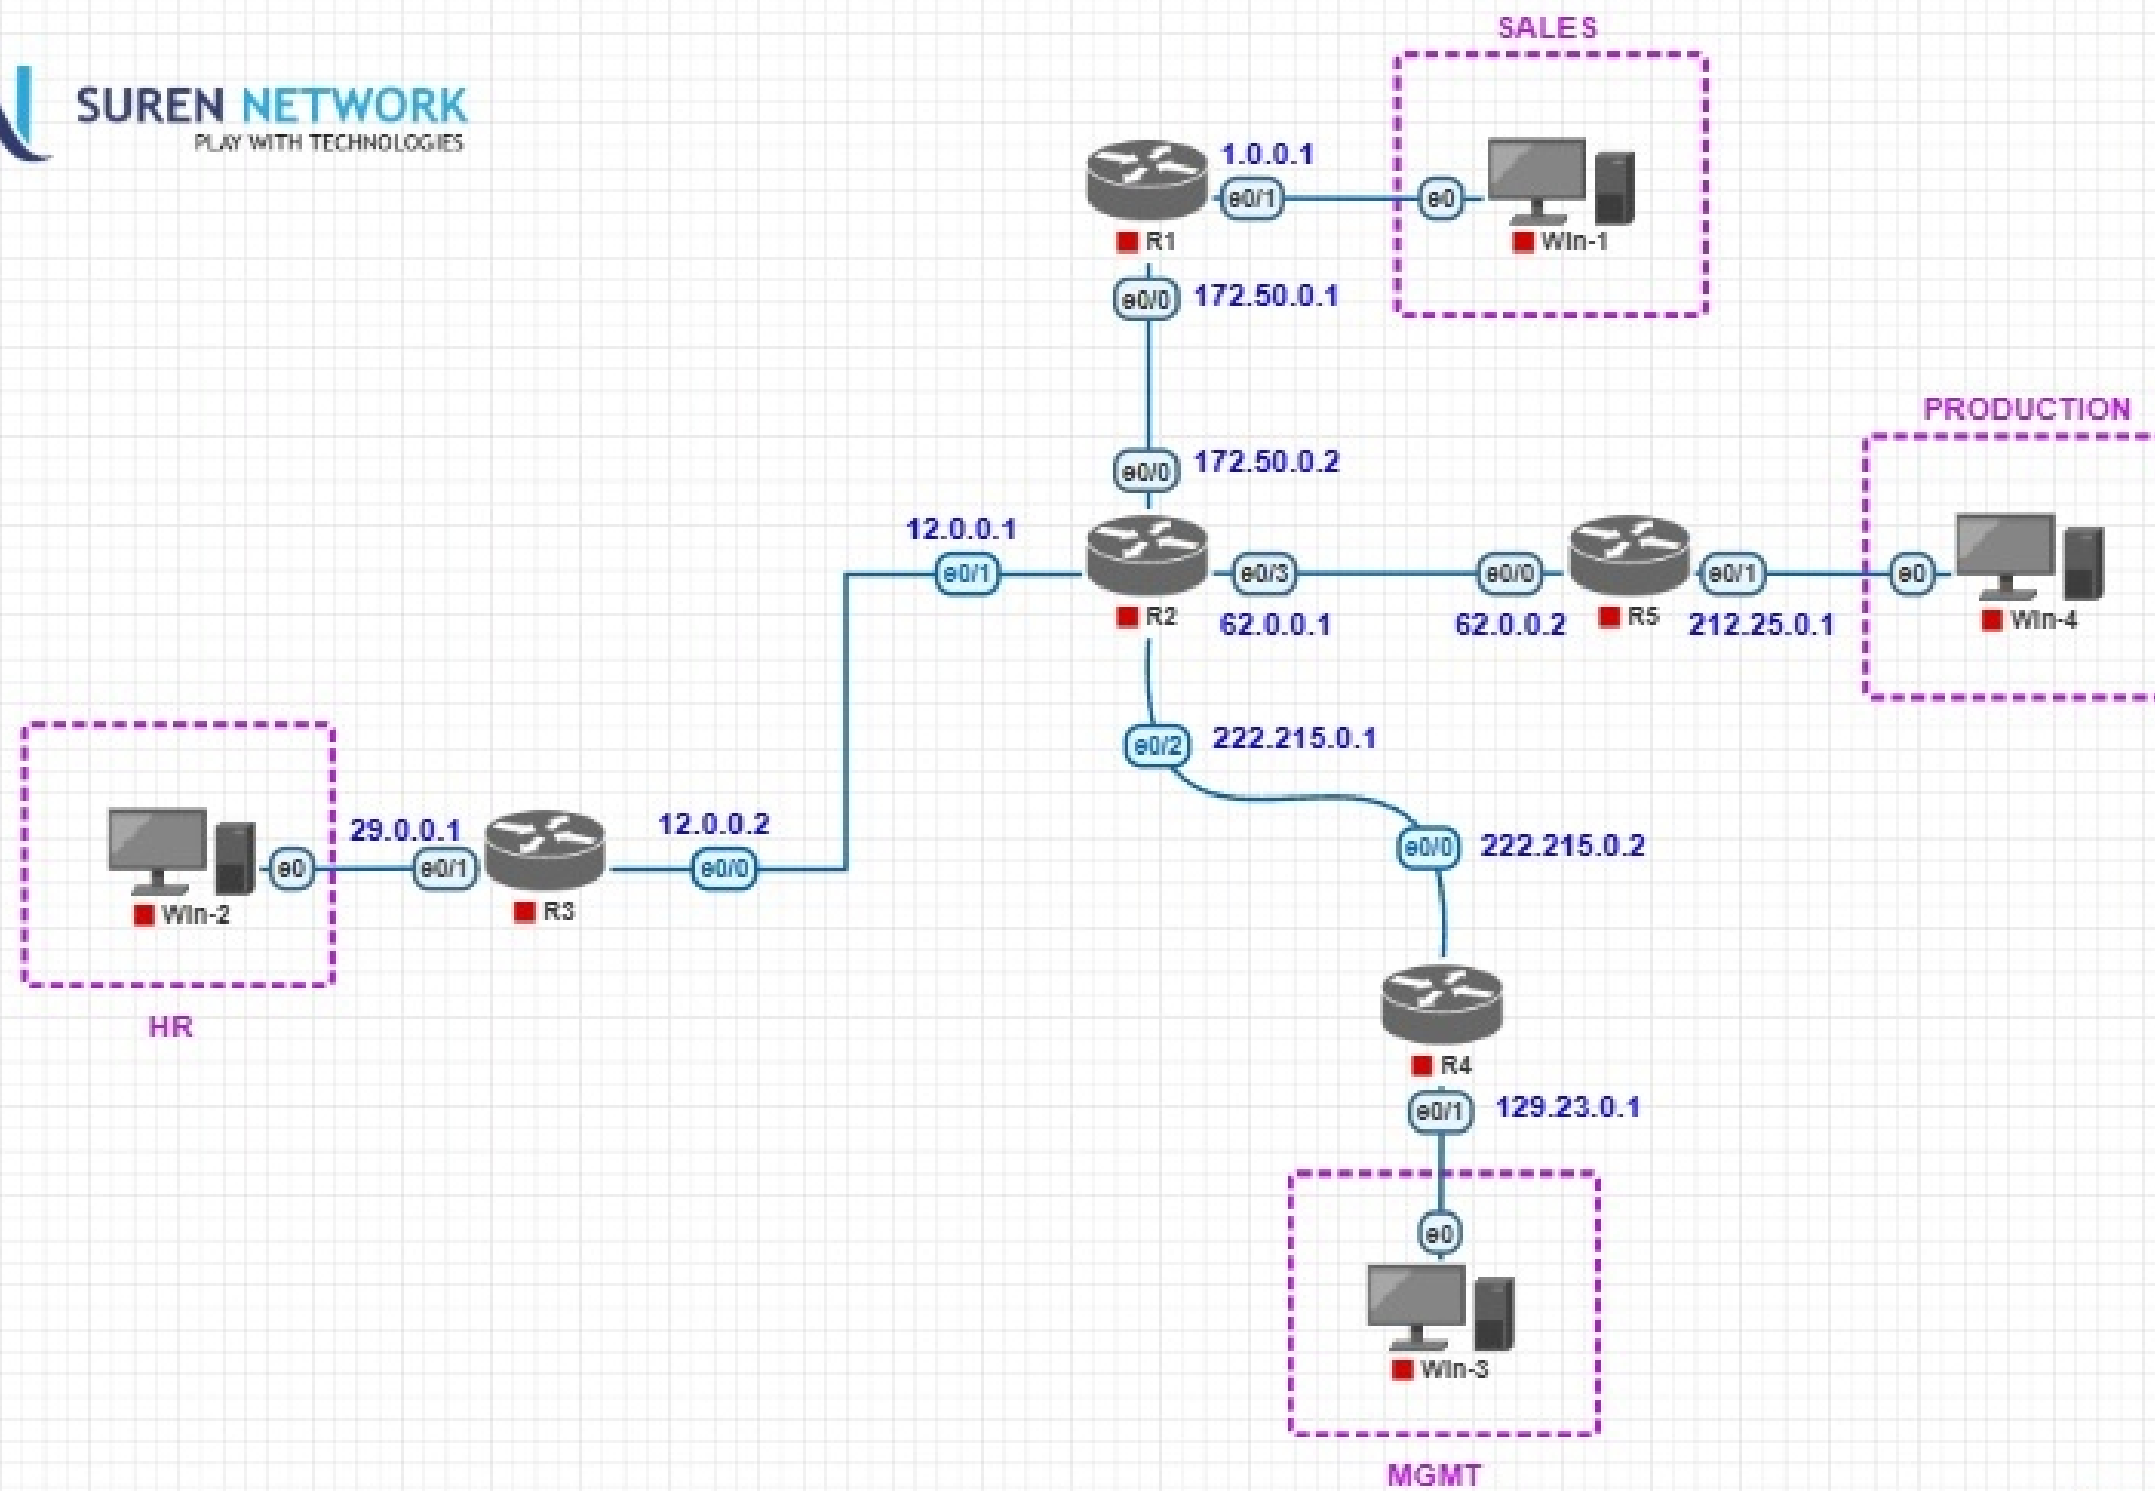

My Network
Places

Recycle Bin

Internet
Explorer

Cisco
ASDM-I...

Old Java ASDM

PuTTY

Tftpd32

C:\WINDOWS\system32\cmd.exe

Microsoft Windows XP [Version 5.1.2600]
<C> Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\user>ipconfig

Windows IP Configuration

← Ethernet adapter Local Area Connection:

Connection-specific DNS Suffix	:	:
Autoconfiguration IP Address	:	169.254.85.245
Subnet Mask	:	255.255.0.0
Default Gateway	:	:

C:\Documents and Settings\user>_

WITHOUT RELAY AGENT
GETTING APIPA IP

```
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\user>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . . : 1.0.0.2
    Subnet Mask . . . . . : 255.0.0.0
    Default Gateway . . . . . : 

C:\Documents and Settings\user>
```

SALES DEPT

C:\WINDOWS\system32\cmd.exe

Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.

C:\Documents and Settings\user>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

Connection-specific DNS Suffix	:	:
IP Address	:	212.25.0.2
Subnet Mask	:	255.255.255.0
Default Gateway	:	212.25.0.1

C:\Documents and Settings\user>_

PRODUCTION DEPT

```
C:\WINDOWS\system32\cmd.exe

Connection-specific DNS Suffix . : 
Autoconfiguration IP Address. . . : 169.254.120.2
Subnet Mask . . . . . : 255.255.0.0
Default Gateway . . . . . : 

C:\Documents and Settings\user>ncpa.cpl
C:\Documents and Settings\user>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  : 
    IP Address. . . . . : 129.23.0.2
    Subnet Mask . . . . . : 255.255.0.0
    Default Gateway . . . . . : 129.23.0.1

C:\Documents and Settings\user>
```

HR DEPT

```
C:\WINDOWS\system32\cmd.exe
C:\Documents and Settings\user>
C:\Documents and Settings\user>ipconfig

Windows IP Configuration

Ethernet adapter Local Area Connection:

    Connection-specific DNS Suffix  . : 
    IP Address. . . . .               : 29.0.0.2
    Subnet Mask . . . . .             : 255.0.0.0
    Default Gateway . . . . .         : 

C:\Documents and Settings\user>
```

MANAGEMENT DEPT